
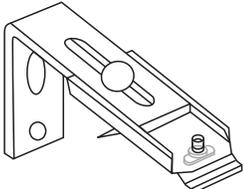


# VERTICAL WRAP

installation instructions

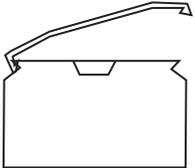


Your Vertical Wrap system has been custom made to your specifications. The appropriate mounting hardware (either ceiling or wall clips) is included as per your order. **PLEASE FOLLOW THESE INSTALLATION INSTRUCTIONS.** You will need a pencil, tape measure, drill, screw driver, pair of pliers, and the appropriate fasteners.

<p>Step 1</p> <h3>OUTSIDE MOUNT</h3> <p>Find the height for the top of the bracket (as measured from the floor) by adding the desired clearance to the overall height of the treatment. When installed, the recommended clearance from the floor is 1/2".</p> <p>Place the first bracket directly over the corner of the window with a maximum of 15" between brackets. Adjust the length of the bracket so that the louvers clear any obstructions.</p> 	<p>Step 1</p> <h3>INSIDE / CEILING MOUNT</h3> <p>Mount the clip bracket directly into the ceiling or head. If installing a valance, that clip must also be installed at this time.</p> <p>The center of the clip bracket is also the center of the vane hook. Therefore, mount the screw a minimum of 2 1/4" in front of the window frame (or other obstruction) to allow clearance for the vanes. The maximum distance between clips should be 15".</p> 
--	--

Step 2

### INSTALL HEADRAIL


After mounting all brackets, snap in the headrail as illustrated. To remove the headrail, simply push the release lip up with a screwdriver.

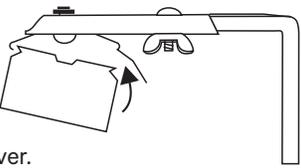

Step 3

### ATTACH VANES


Push the vane into the top of the hook, then pull straight down to ensure it locks into place.

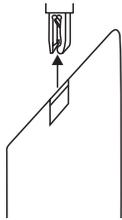

Step 4

### ATTACH TENSION DEVICE

Attach the child safety device to its mounting bracket. Pull down on the bracket to align the center of the screw hole with the indicator line. Mark and pre-drill the screw holes. Pull down on the bracket and device, align it with the drilled holes, and mount the bracket. Check to ensure the loop can move freely through the device.

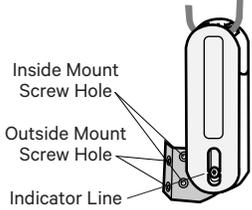


Step 5

### TEST TRAVERSE

Alternately pull the cords to see that the blind traverses smoothly in both directions.


**CAUTION: ONLY TRAVERSE THE BLIND WITH THE VANES IN THE OPEN POSITION!**

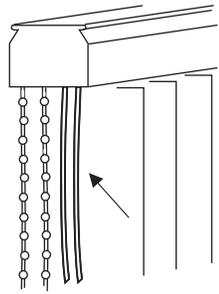

Step 6

### TEST ROTATION


Pull the beaded chain once in each direction, to completely rotate the vanes from open to closed. This will automatically align all of the vanes.

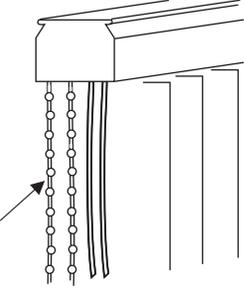

Step 7

**ATTACH SNAP TAPE**

Slip the snapped portion of the snap tape over the front of each vane, then slide the snap tape around the other side of the carrier and snap the tape at the back of each vane.

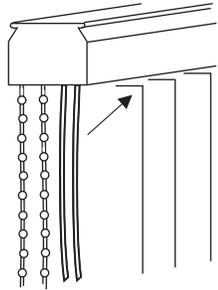


Step 8

**INSERT BOTTOM OF VANES**

Carefully slide each vane in front of the tack at the bottom of the wrap.


**TIP: To prevent snagging the fabric, wrap a plastic sandwich or grocery bag around the vane while sliding it in front of the tack.**

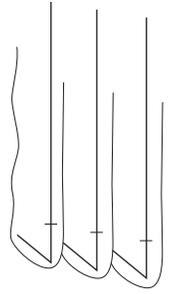

Step 9

**OUTSIDE MOUNT VALANCE**

Snap the mounting clips (that are attached to the valance clips) onto the top of the headrail. Attach the valance to the valance returns using the valance return connectors, then snap the completed valance onto the valance clips.

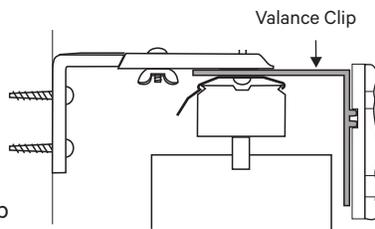


**FOR SHIRRED SLEEVE VALANCE:** Shirr the sleeve onto the PVC valance. Attach the returns to the valance using the valance return connectors. Shirr the sleeve over the returns and use the provided clips to secure the fabric. Connect the valance clips (over the fabric) onto the valance, and connect the completed valance onto the headrail.

Step 9


**INSIDE MOUNT VALANCE**

Instal the mounting screw through the headrail bracket clip and valance clip as shown (see Step 1). Attach the valance to the returns using the valance return connectors, then snap the completed valance (with returns) onto the valance clips. Make sure the vanes do not hit the valance.

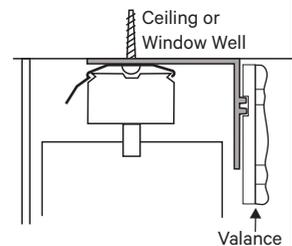

**PACKING LIST**

1. Headrail with Bead Chain and Cord
2. Wall Brackets
3. Mounting Clips
4. Child-Safe Tension Device
5. PVC Vanes
6. Valance
7. Valance Returns
8. Valance Clips
9. Valance Return Connectors

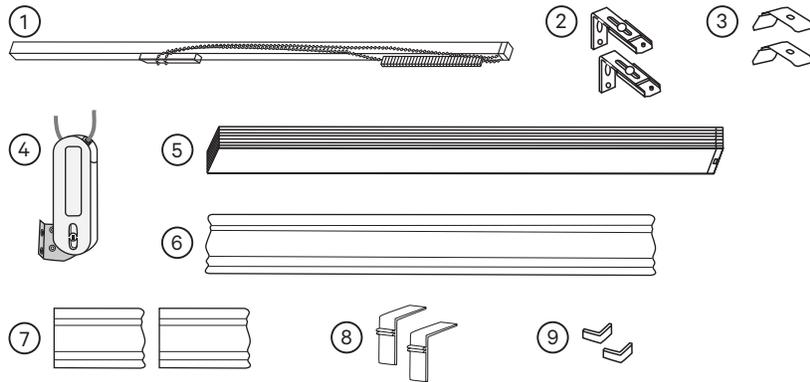

**CAUTION!**

- PVC vanes should be stored on a flat, level surface until they are installed.
- Your Vertical Wrap fabric was carefully inspected for holes, snags, runs and other flaws prior to shipping. Please use extra caution when installing the wrap onto the vertical system. **flair21 will not be held responsible for damage to the fabric caused by installation or rough handling of the fabric.**
- The child-safety tension device must be properly and securely mounted with tension on the drive loop for the system to be fully operable.